


Fabric-Form® Application Instructions


GeoKnight DC8AP Press - Bottom Platen

This Fabric-Form instruction sheet was developed using a GeoKnight DC8AP with a **Bottom Heat Platen**. Since every heat press is slightly different, we recommend testing the heat & time on your specific press. If you have a top heat platen, please refer to our **Top Heat Platen** instructions.

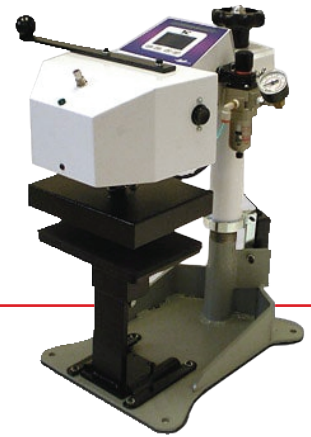

1. Press settings:
Heat: 350°
Pressure: 40 PSI


2. Remove the liner from the back of the emblem.

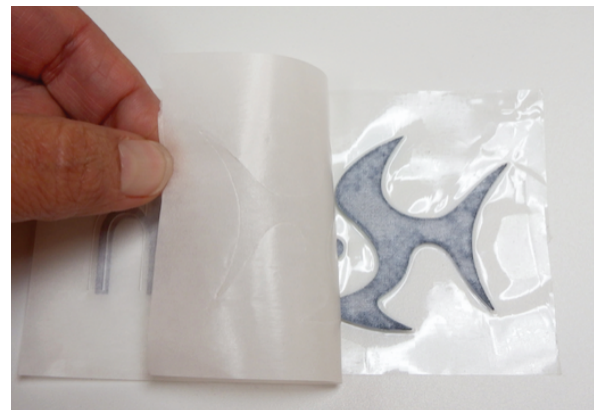

3. Position the emblem on the shirt in the desired location.
Optional: you can add a thin strip of Stahl's Thermo Tape on top of the emblem to hold it in place.

Fabric-Form® Application Instructions

- 4.** Place the shirt on the heat press so that the emblem is face-up in the middle of the bottom platen.
- 4.** Lay the silicone pad on top of the emblem so that the emblem is centered under the silicone pad and is completely covered.

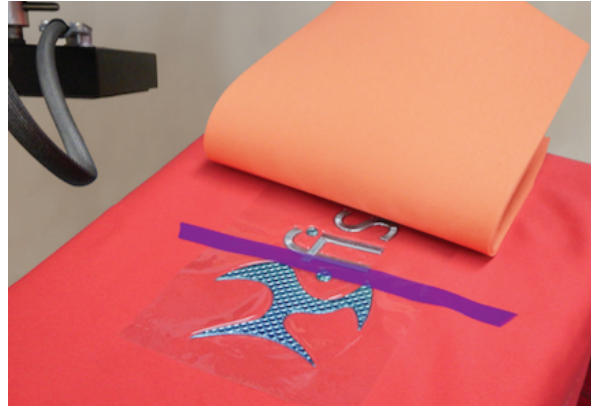

- 5.** Heat your emblem. Start with 10 seconds. Depending on your machine and fabric, additional time may be needed. The time should not exceed 30 seconds.

- 6.** Remove the shirt from the heat press.
- 6.** Allow it to cool for 15-20 seconds.
- 6.** Slowly peel back the protective film from the emblem at a sharp angle.



Congratulations! You now have an eye-catching, upscale decoration.