


Fabric-Form® Application Instructions

GeoKnight DC8AP Press - Top Platen

This Fabric-Form instruction sheet was developed using a GeoKnight DC8AP with a **Top Heat Platen**. Since every heat press is slightly different, we recommend testing the heat & time on your specific press. If you have a bottom heat platen, please refer to our **Bottom Heat Platen** instructions.

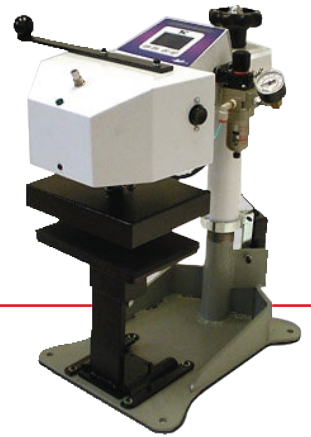

1. Press settings:
Heat: 350°
Pressure: 40 PSI

2. Remove the liner from the back of the emblem.



3. Position the emblem on the shirt in the desired location.
Add a thin strip of Stahl's Thermo Tape on top of the emblem to hold it in place.

Fabric-Form® Application Instructions

4. Turn the shirt inside out.
Place the silicone pad on the bottom platen of the heat press.
Place the shirt, still inside out, on the heat press so that the front of the emblem is centered on the top of the silicone pad.



5. Heat your emblem. Start with 10 seconds. Depending on your machine and fabric, additional time may be needed. The time should not exceed 30 seconds.

6. Remove the shirt from the heat press.
Allow it to cool for 15-20 seconds.
Slowly peel back the protective film from the emblem at a sharp angle.



Congratulations! You now have an eye-catching, upscale decoration.